how to install?

WALL PREPARATION


To prepare painted walls that are already in good condition, simply wash them with soap and then let dry. Add an acrylic primer/emulsion, and allow that to dry fully before hanging wallpaper.

Make sure that there are no hooks, holes, dents, and cracks. Allow at least 30 days prior to installation for recently painted walls.

MURAL INSTALLATION

For DIY, we recommend that two people install the mural together.

- Prepare the following materials: Ruler/tape measure, Wallpaper glue (water-based), sharp cutter, Brush/roller and Towel
- 2 Lay out your mural panels before installing to ensure panel order. Leave 2-3 cm overlap. Do not pre-trim your mural.
- 3 Make guidelines on the wall.

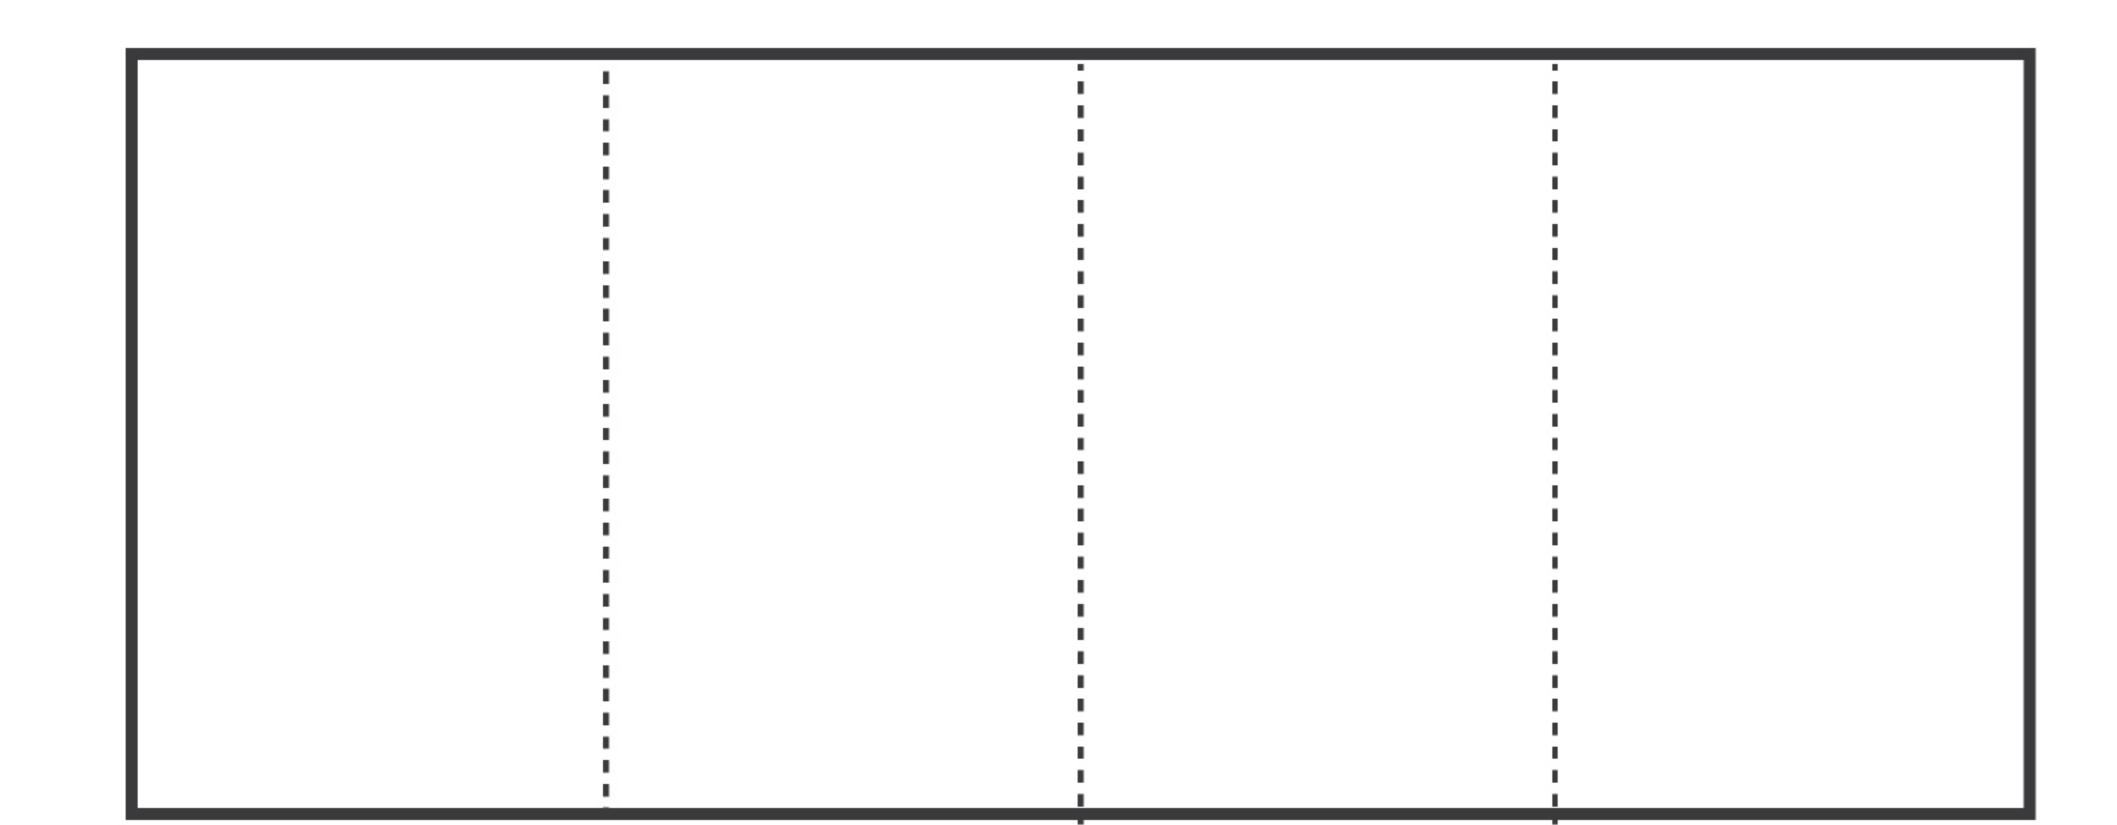

Lay the strip of wallpaper mural face down on a clean work surface.

Brush paste on to the top half of the strip. Gently fold that section back to meet the middle. Brush paste on the remaining half of the strip. Fold the bottom end in to meet the middle. Allow the paper to rest in this "booked" position for 10 minutes.

Hang the first panel, working from top to bottom. Smooth over with a soft brush to ensure no air bubbles remain underneath. Check carefully for correct fit in key image areas (eye level and focal points) before top and bottom trimming, and reposition if necessary. Remove excess paste using a clean towel.

Use the mark at the top and bottom as a guide to overlap the second panel onto the first. Visually match the image at the join and smooth out.

Cut down the center of the overlap. Peel off the cut portion of panel 2.

Peel back panel 2 to remove the cut portion of panel 1 behind. Readhere panel 2 edge for a clean matching seam.



Continue to hang each subsequent panel using the method described above until the mural is complete. Carefully clean any adhesive or residue, then step back and admire your new mural. What a beauty!